

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



Video guide

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE




- Open the car battery compartment.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- Store the recorder in a stable place where it will not obstruct the closing of the bonnet.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE

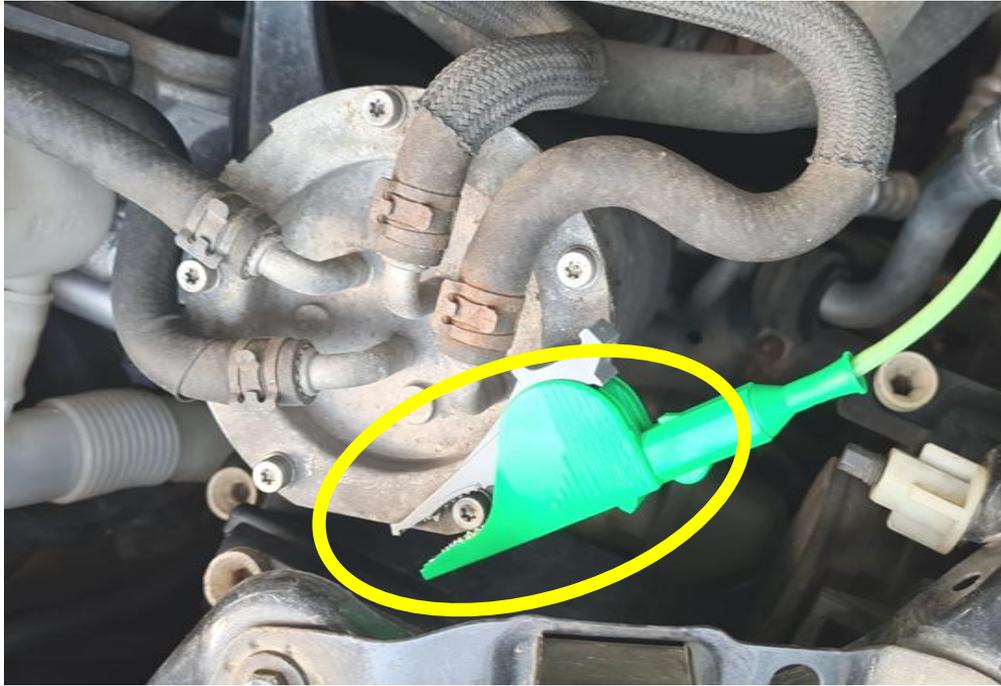

- Attach the green crocodile clip to a suitable point on the car body or to another point conductively connected to the car body.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- Connect the black crocodile clip to the minus terminal of the car battery.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- Finally, connect the red step clip to the plus terminal of the car battery.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- The green light will flash rapidly. After the set delay time has elapsed the measurement starts, the red light will flash once per set recording period.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- Close and lock the vehicle properly. Allow the set measurement time to elapse.

HOW TO CONNECT THE LEAKTEST TO THE VEHICLE



- Disconnecting from the vehicle: unlock the vehicle and open the bonnet. The light on the Leaktest recorder no longer flashes. Disconnect the LeakTest - first the red, then the black and then the green crocodile clip.